



Ground connections for the RoGators 900/1100/1300

Two grounds on inside of Right rear panel of cab


Gray arrows below

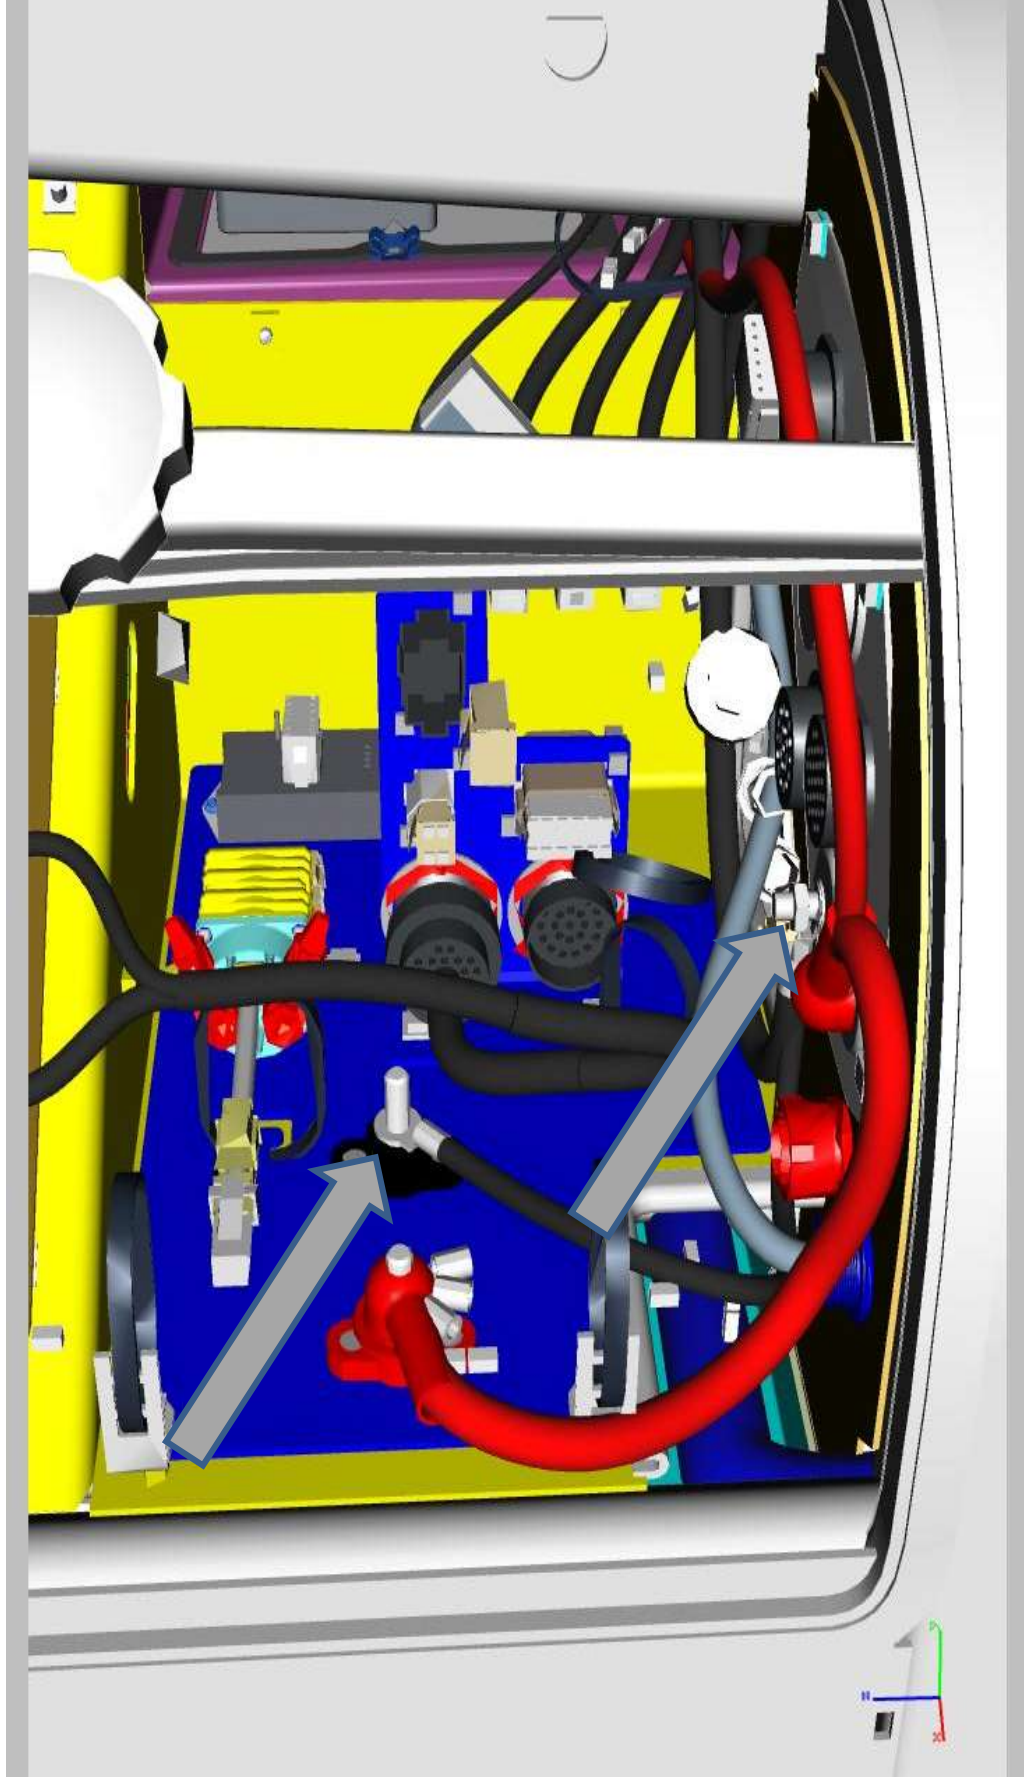


Ground on the inside of the cab at the inside of the right front panel.

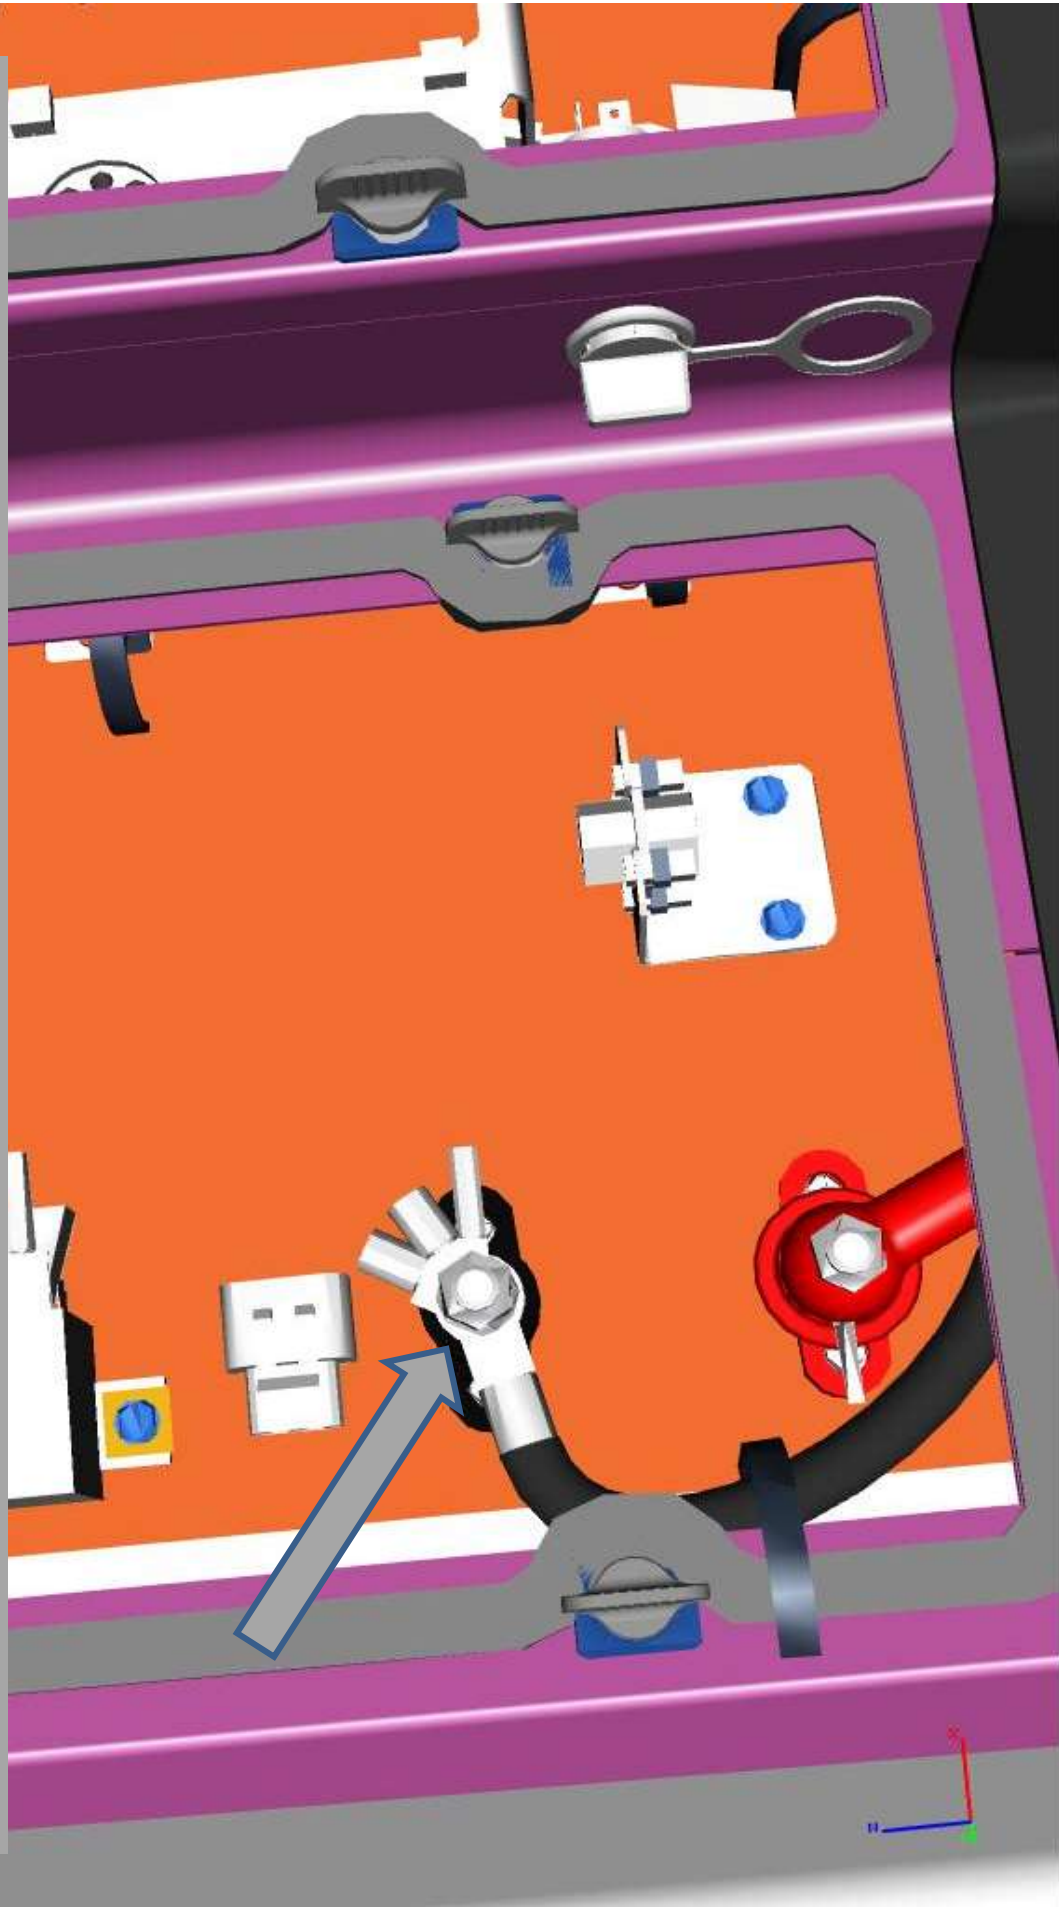


Three grounds under the right rear corner of the cab.
Gray arrows below

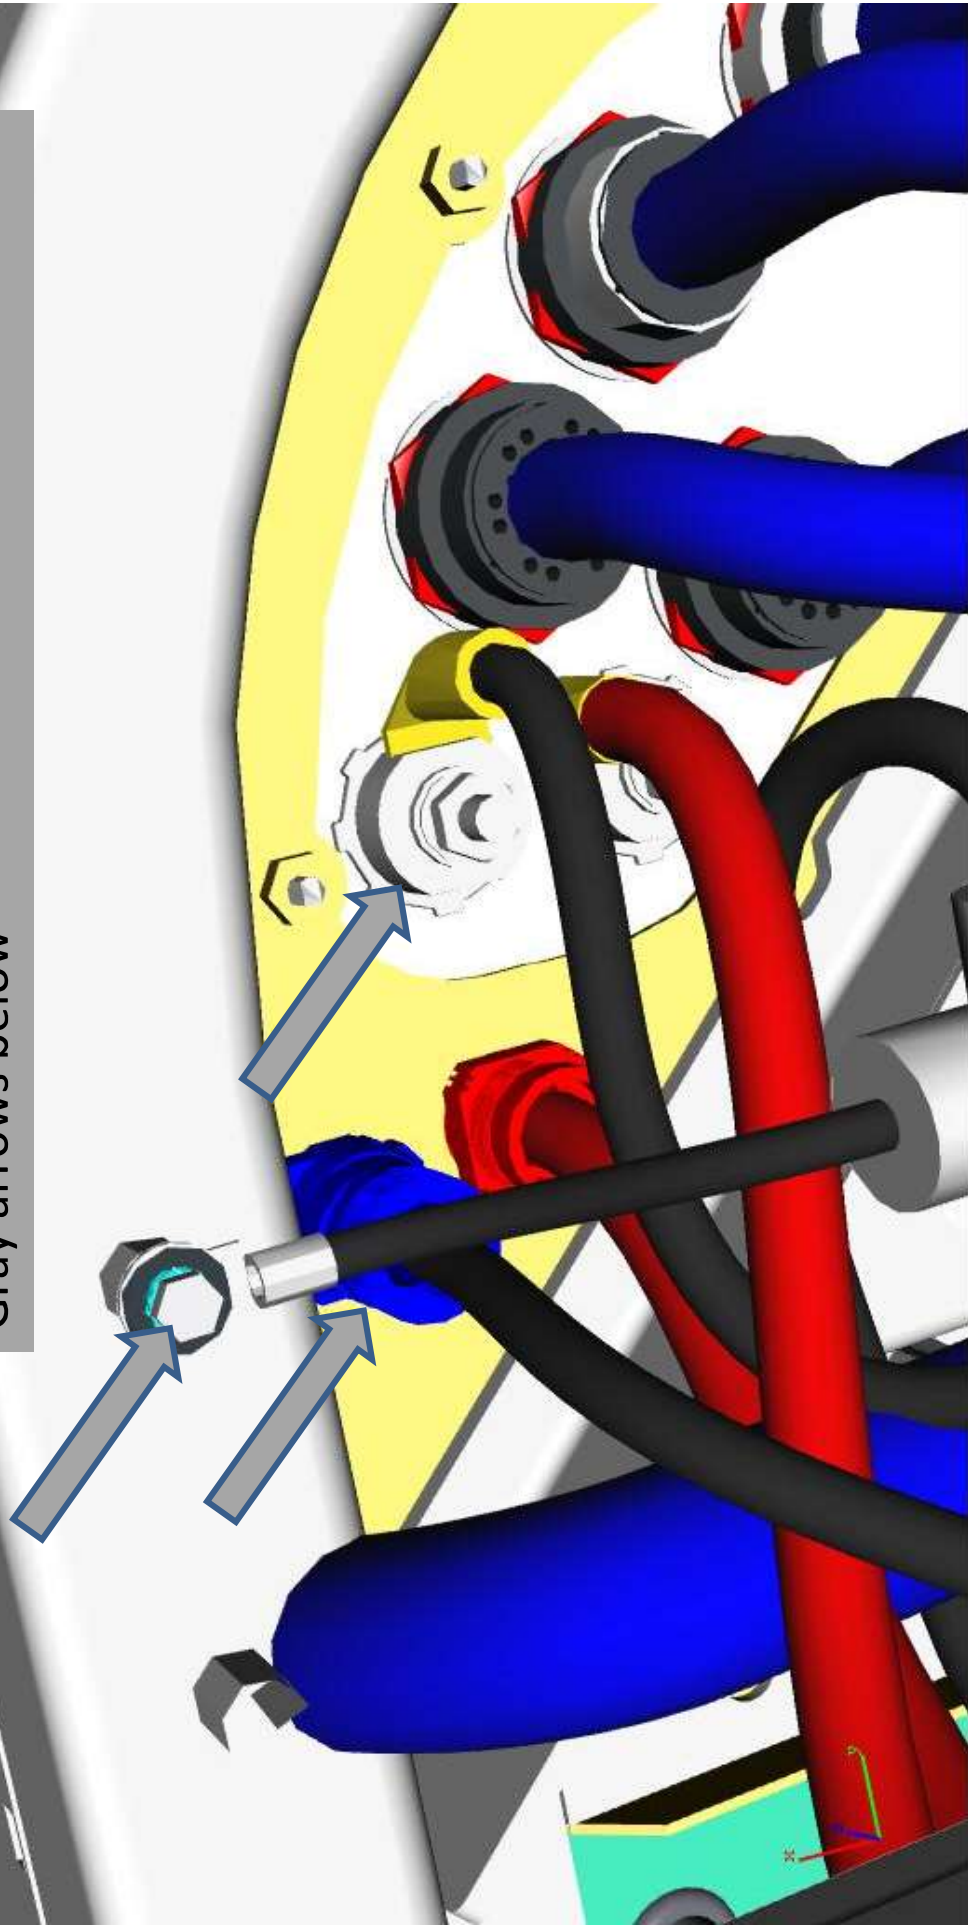


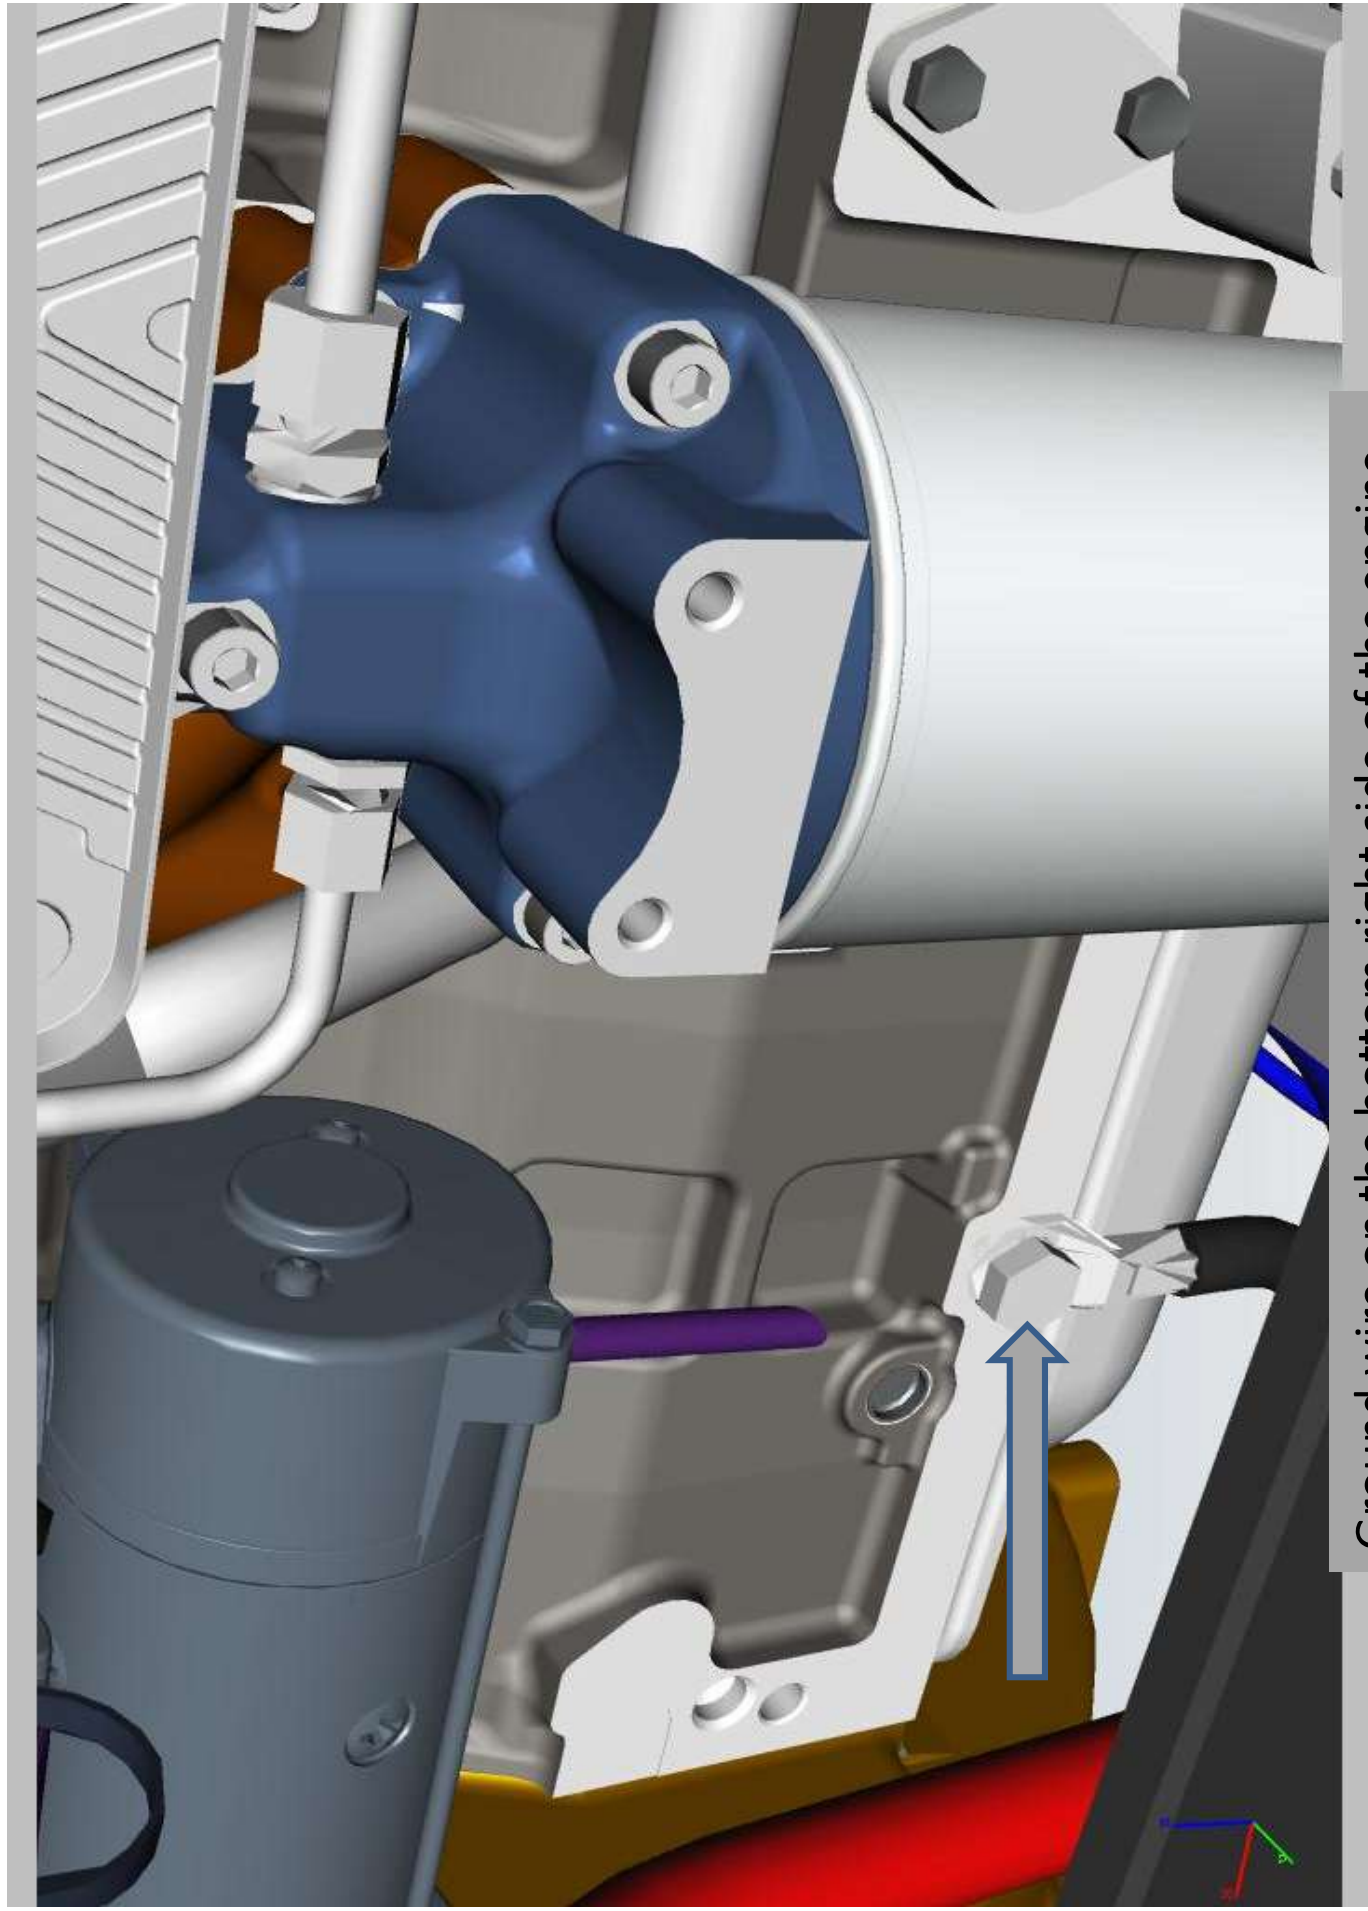


Ground wire on the bottom right side of the engine.
Below Starter. See gray arrow above

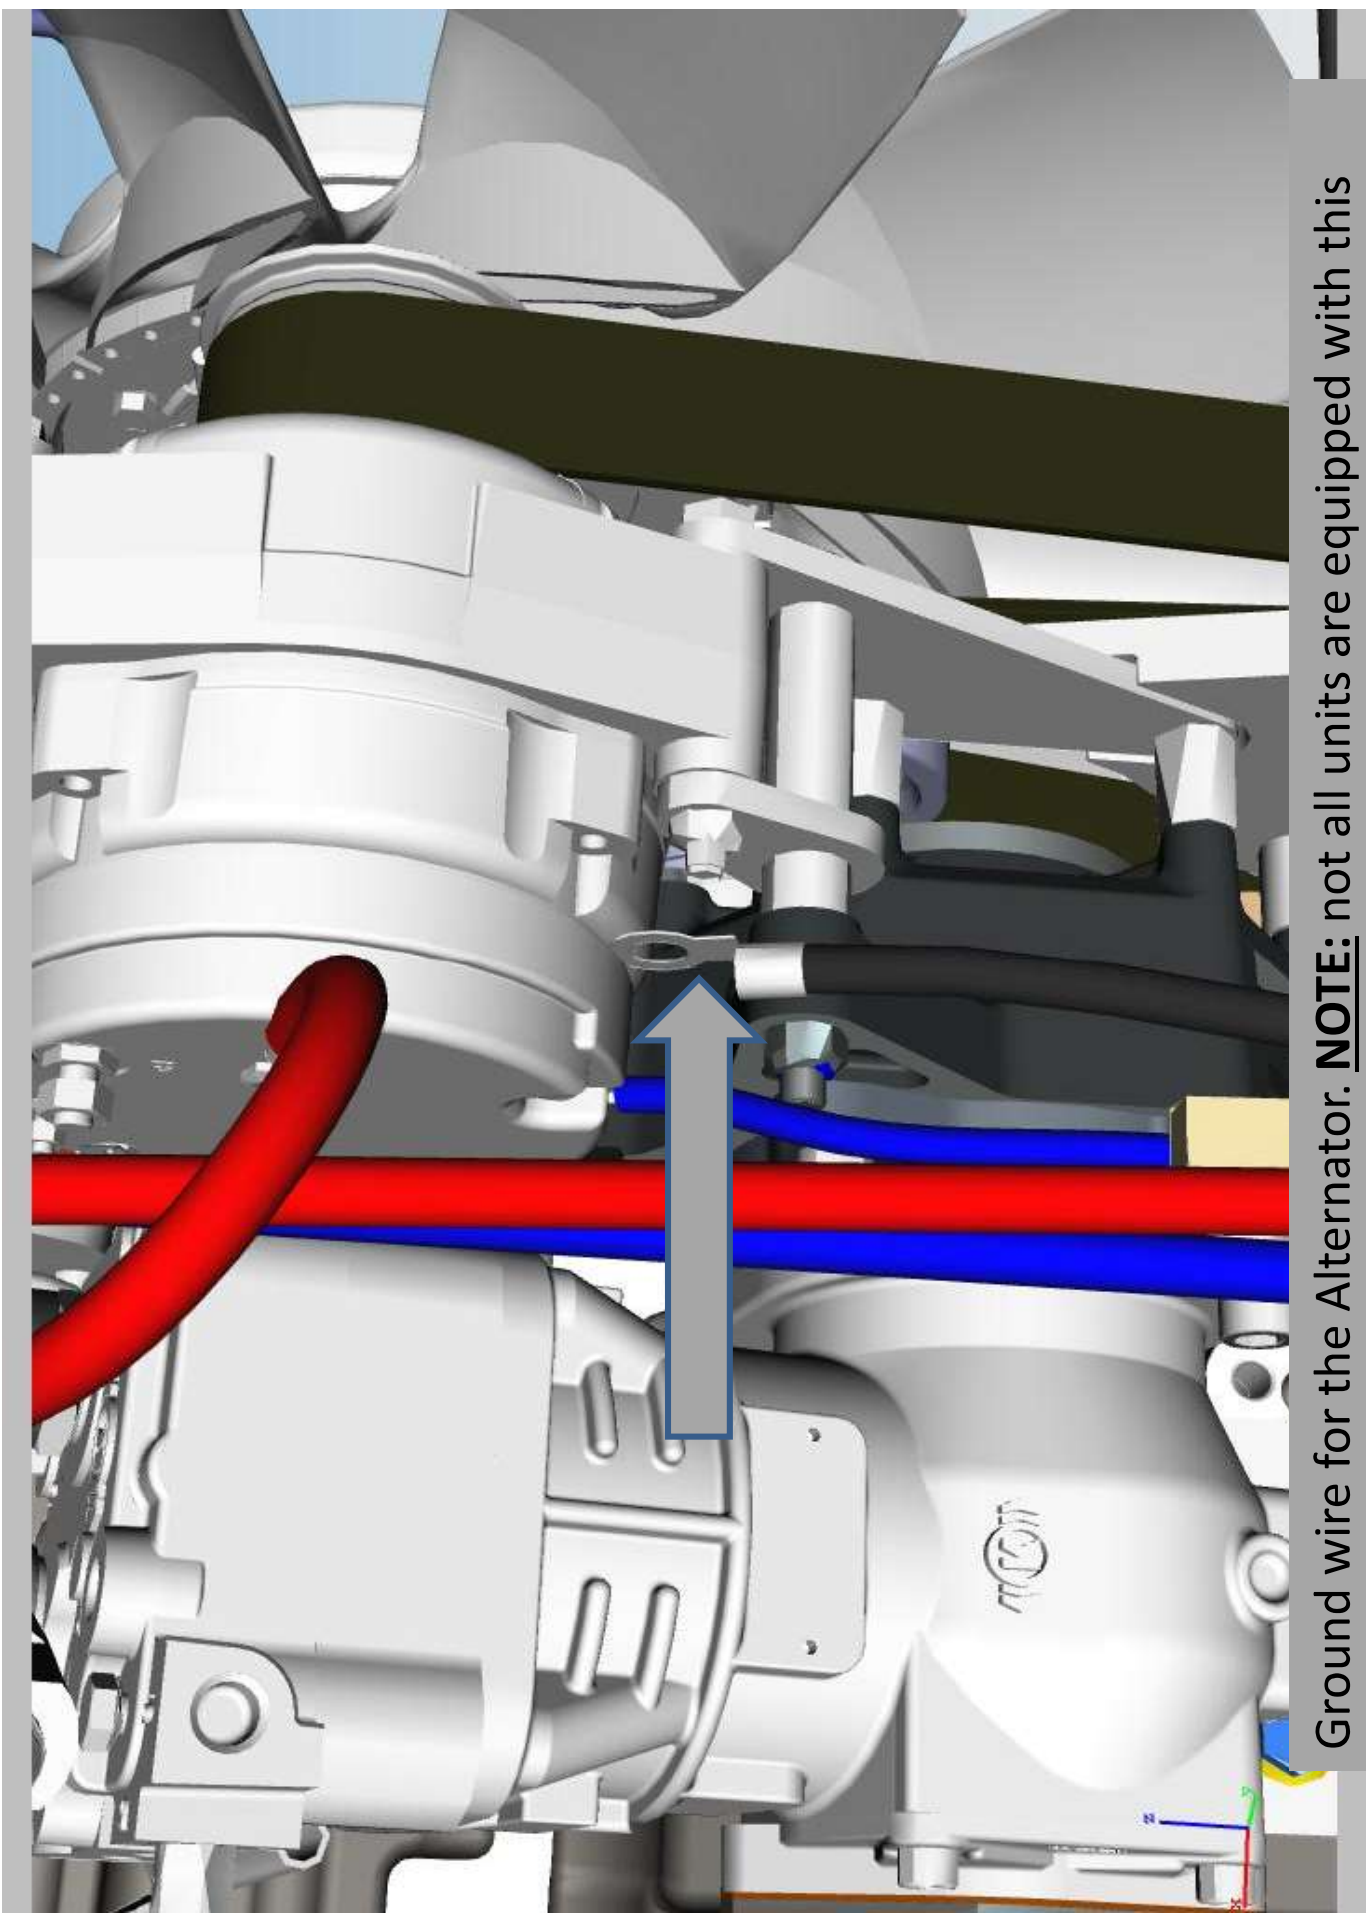


Ground wire for the Alternator. **NOTE:** not all units are equipped with this Wire. If not equipped with this wire remove alternator and verify that there Is no paint on mating surfaces where alternator mounts to the engine

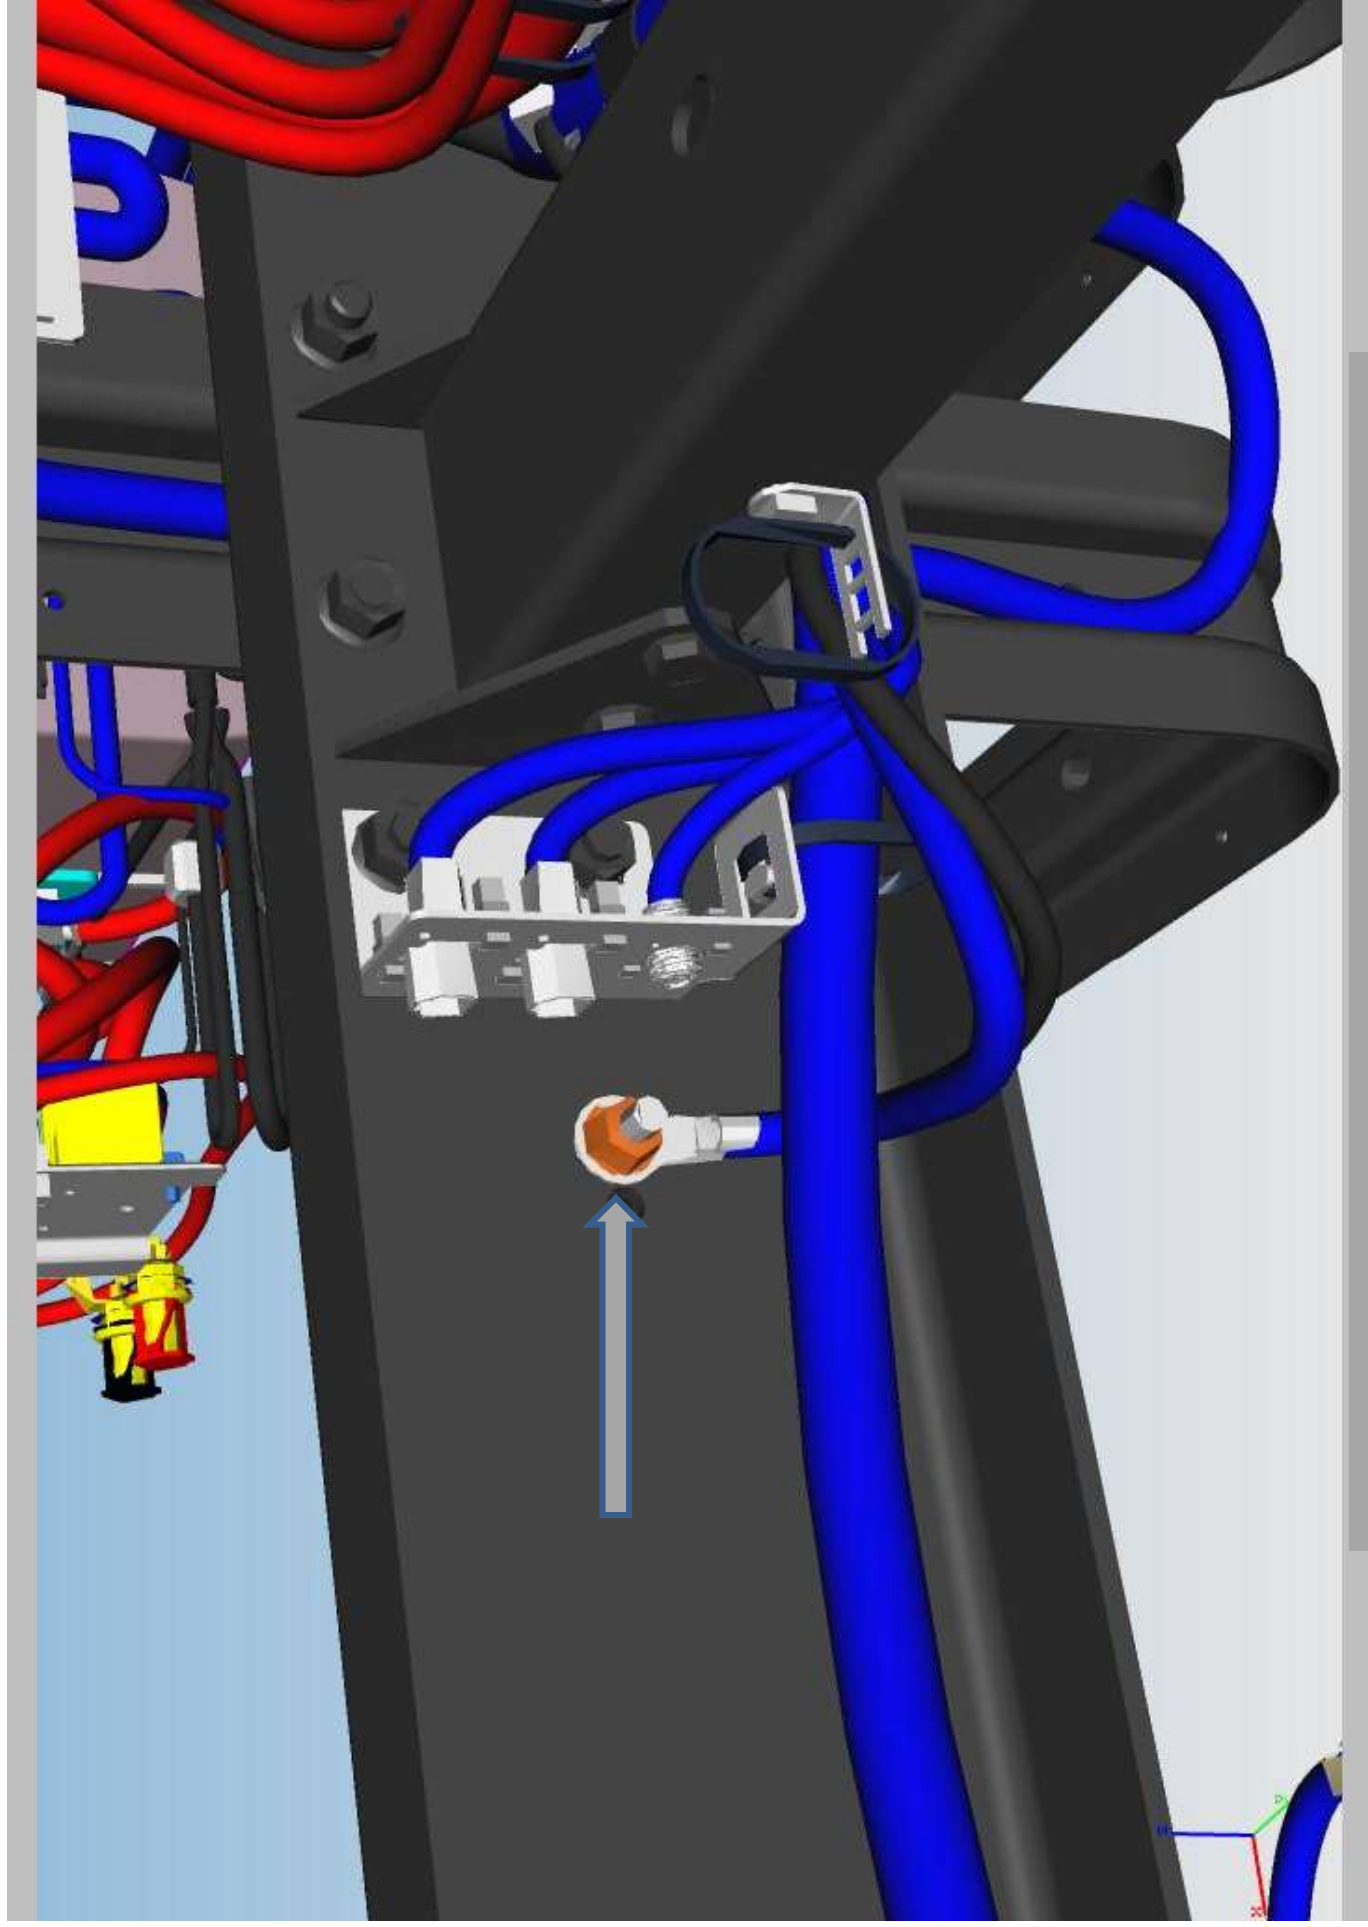


Ground wire on the left frame rail under
left rear corner of cab. See gray arrow above

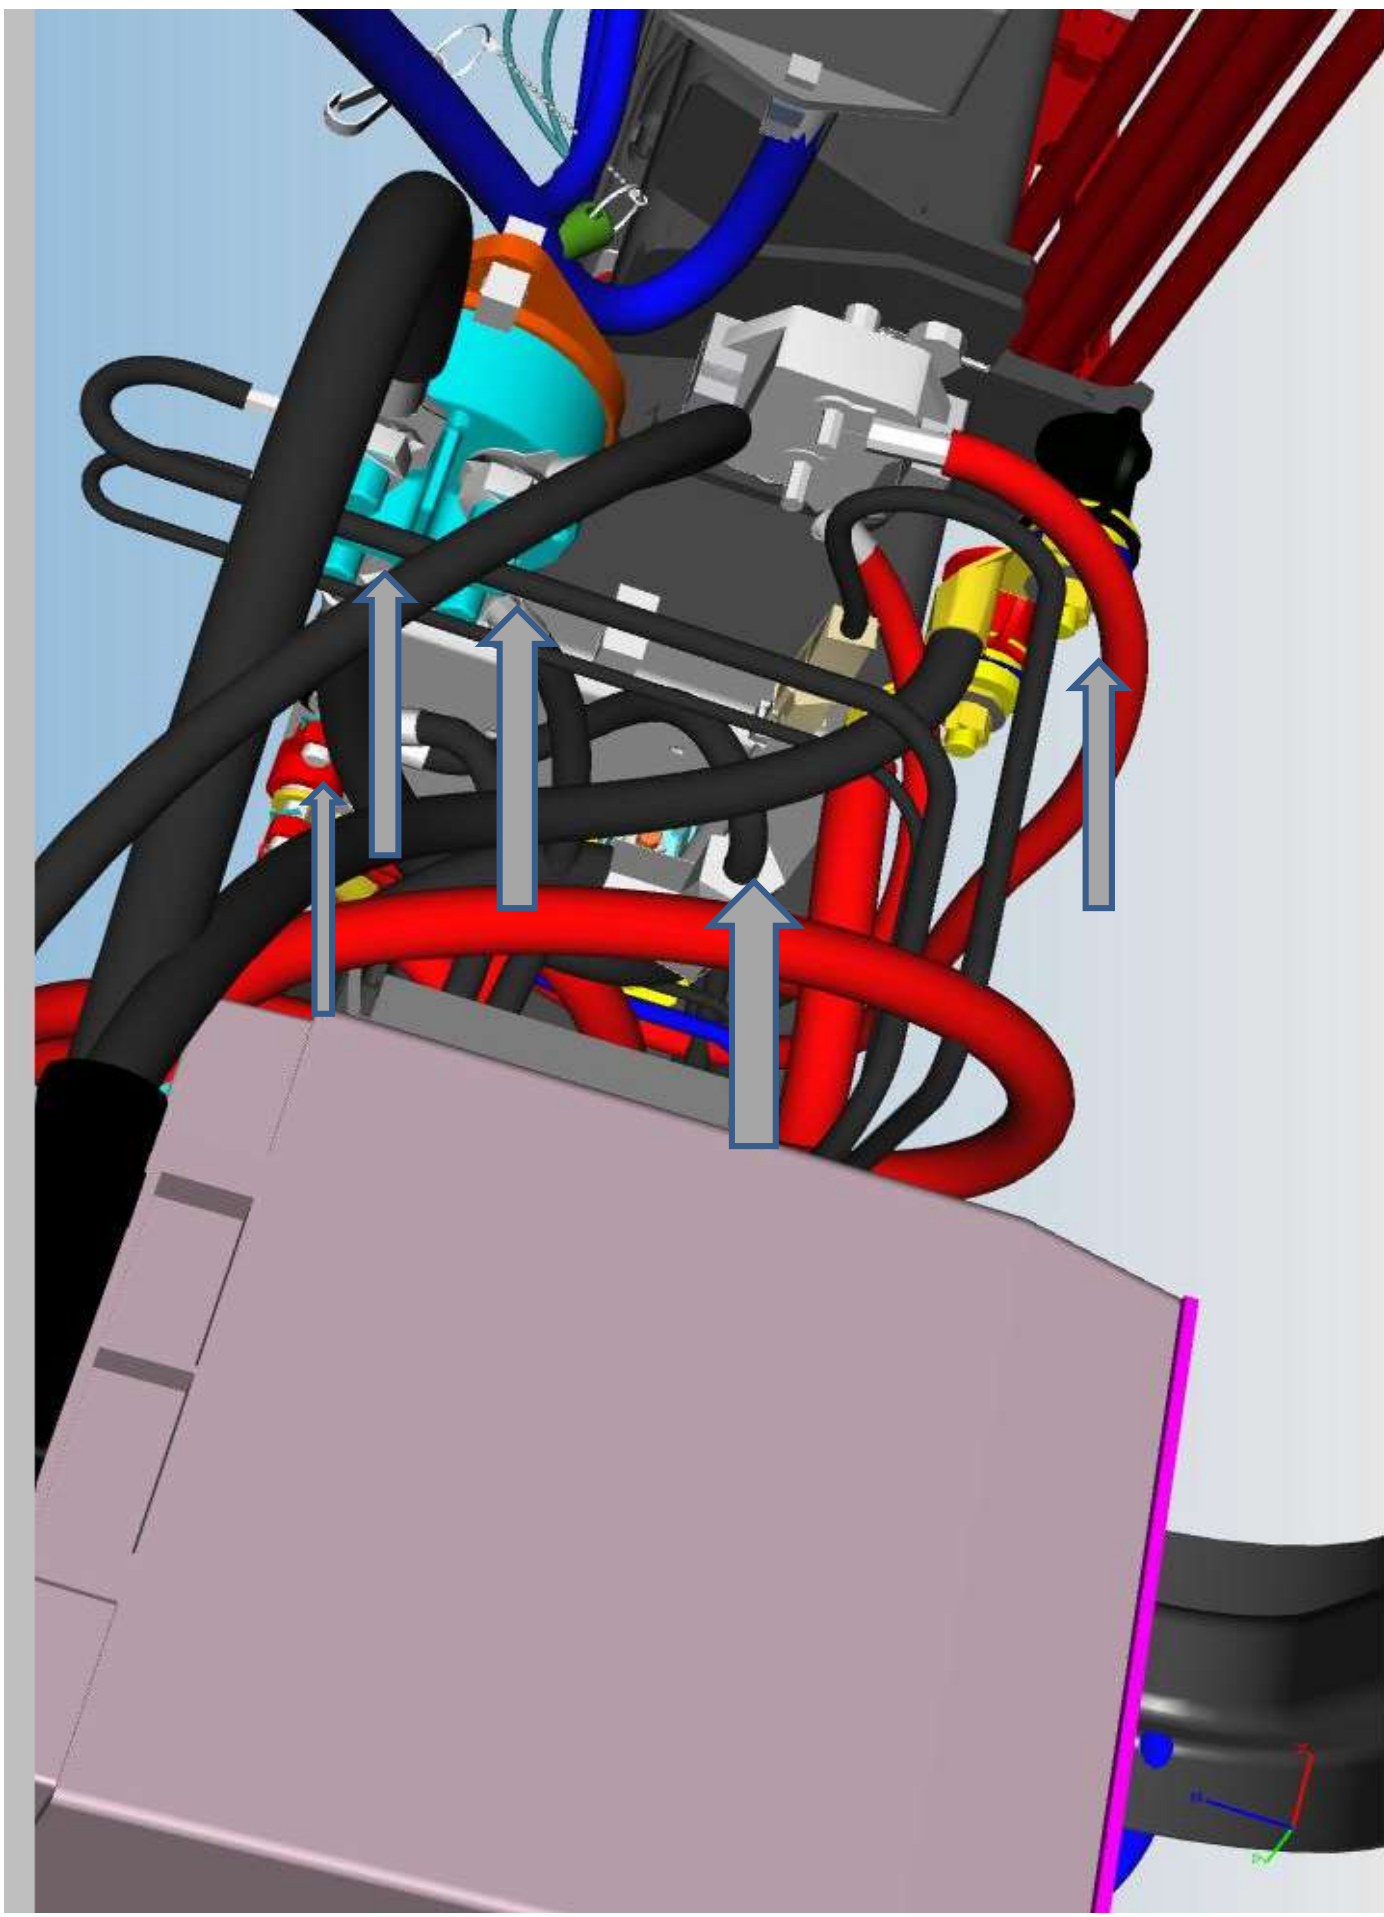


Ground wires inside the battery box. (Steel battery case has been removed to better show 5 locations.) See gray arrows above

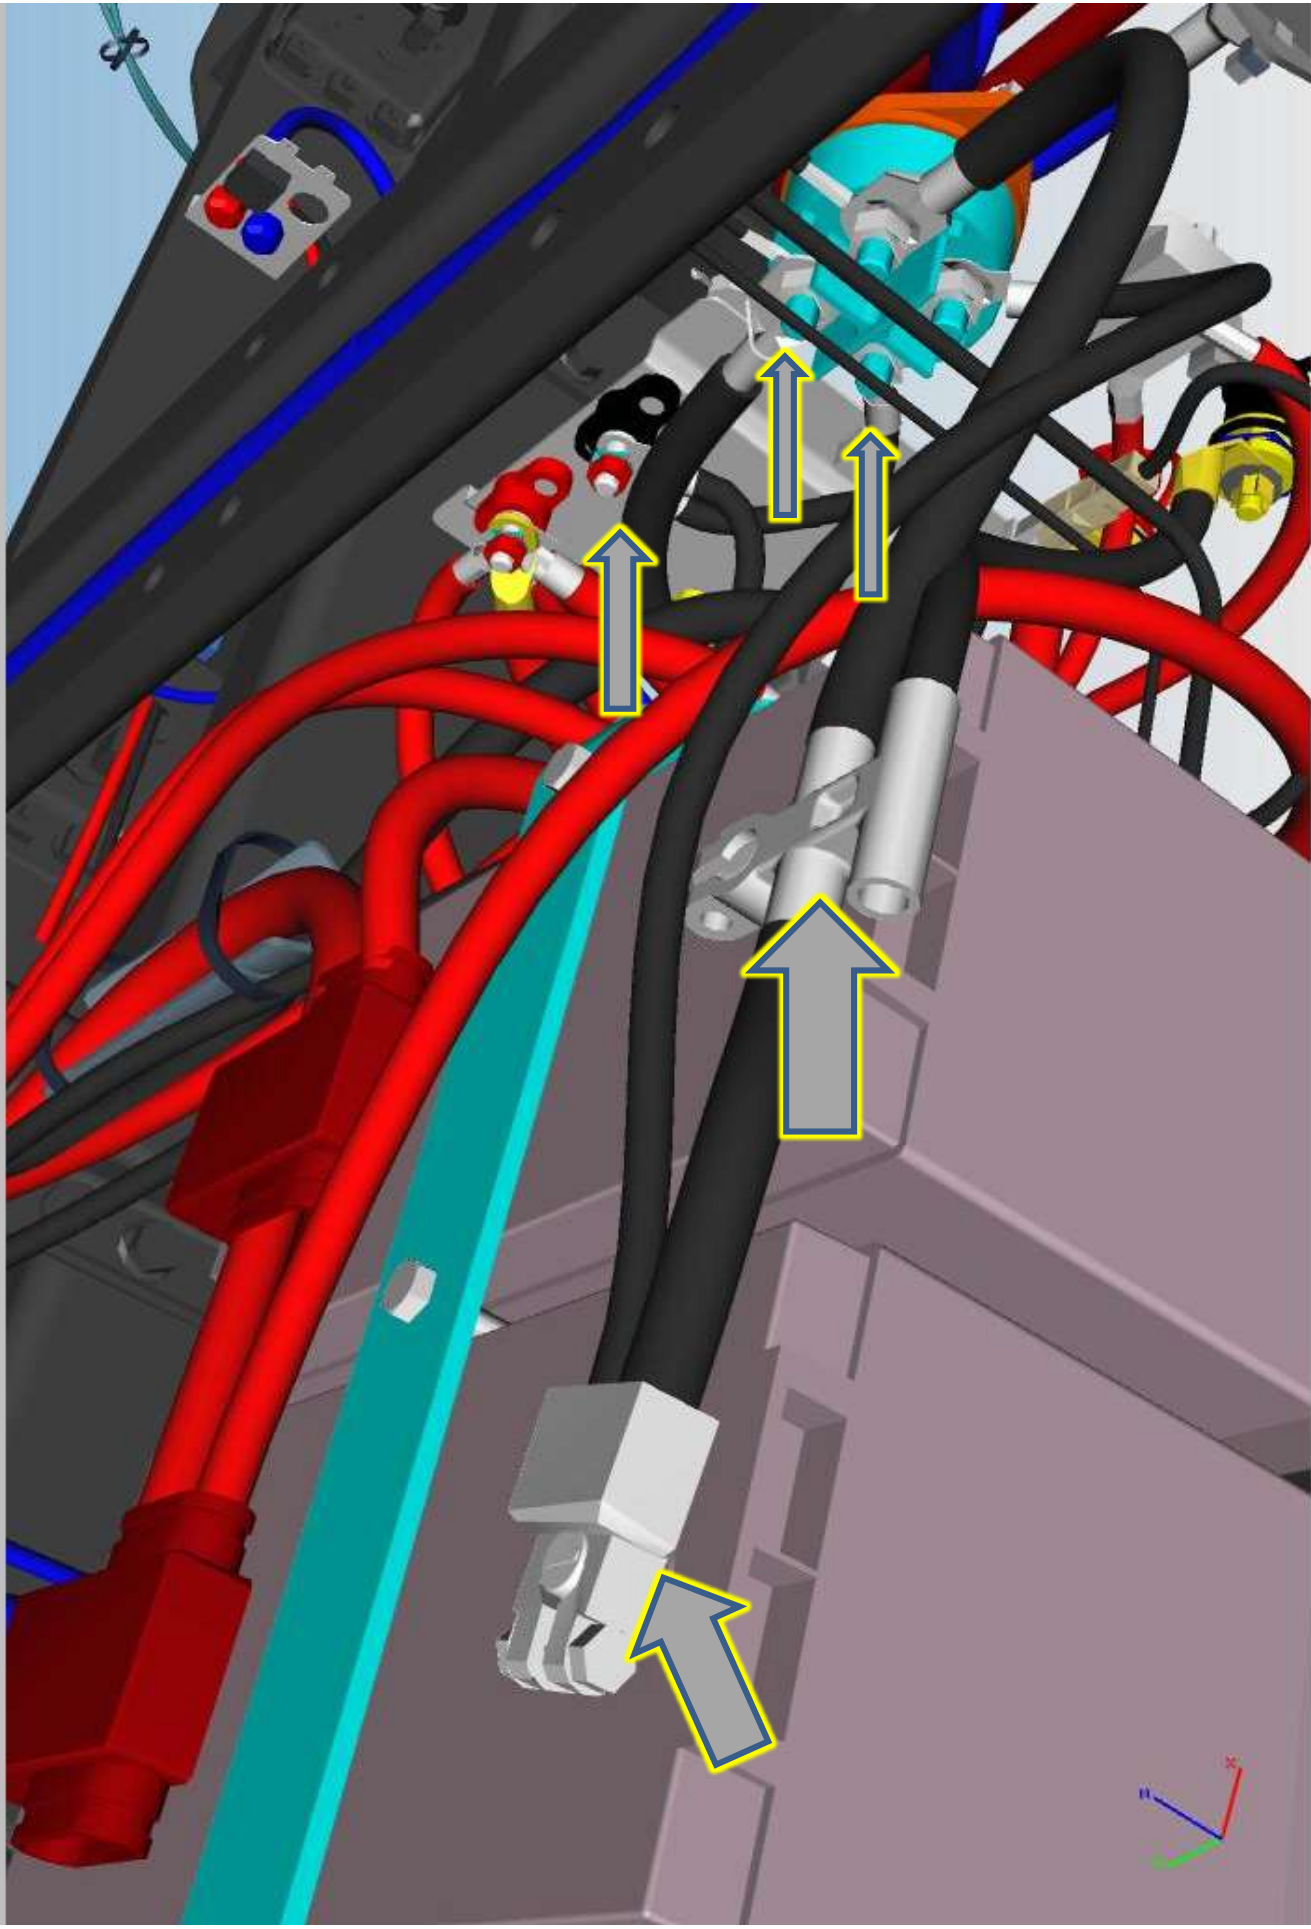

More grounds inside the battery box. (Steel battery case has been removed to better show locations.) See gray arrows above.

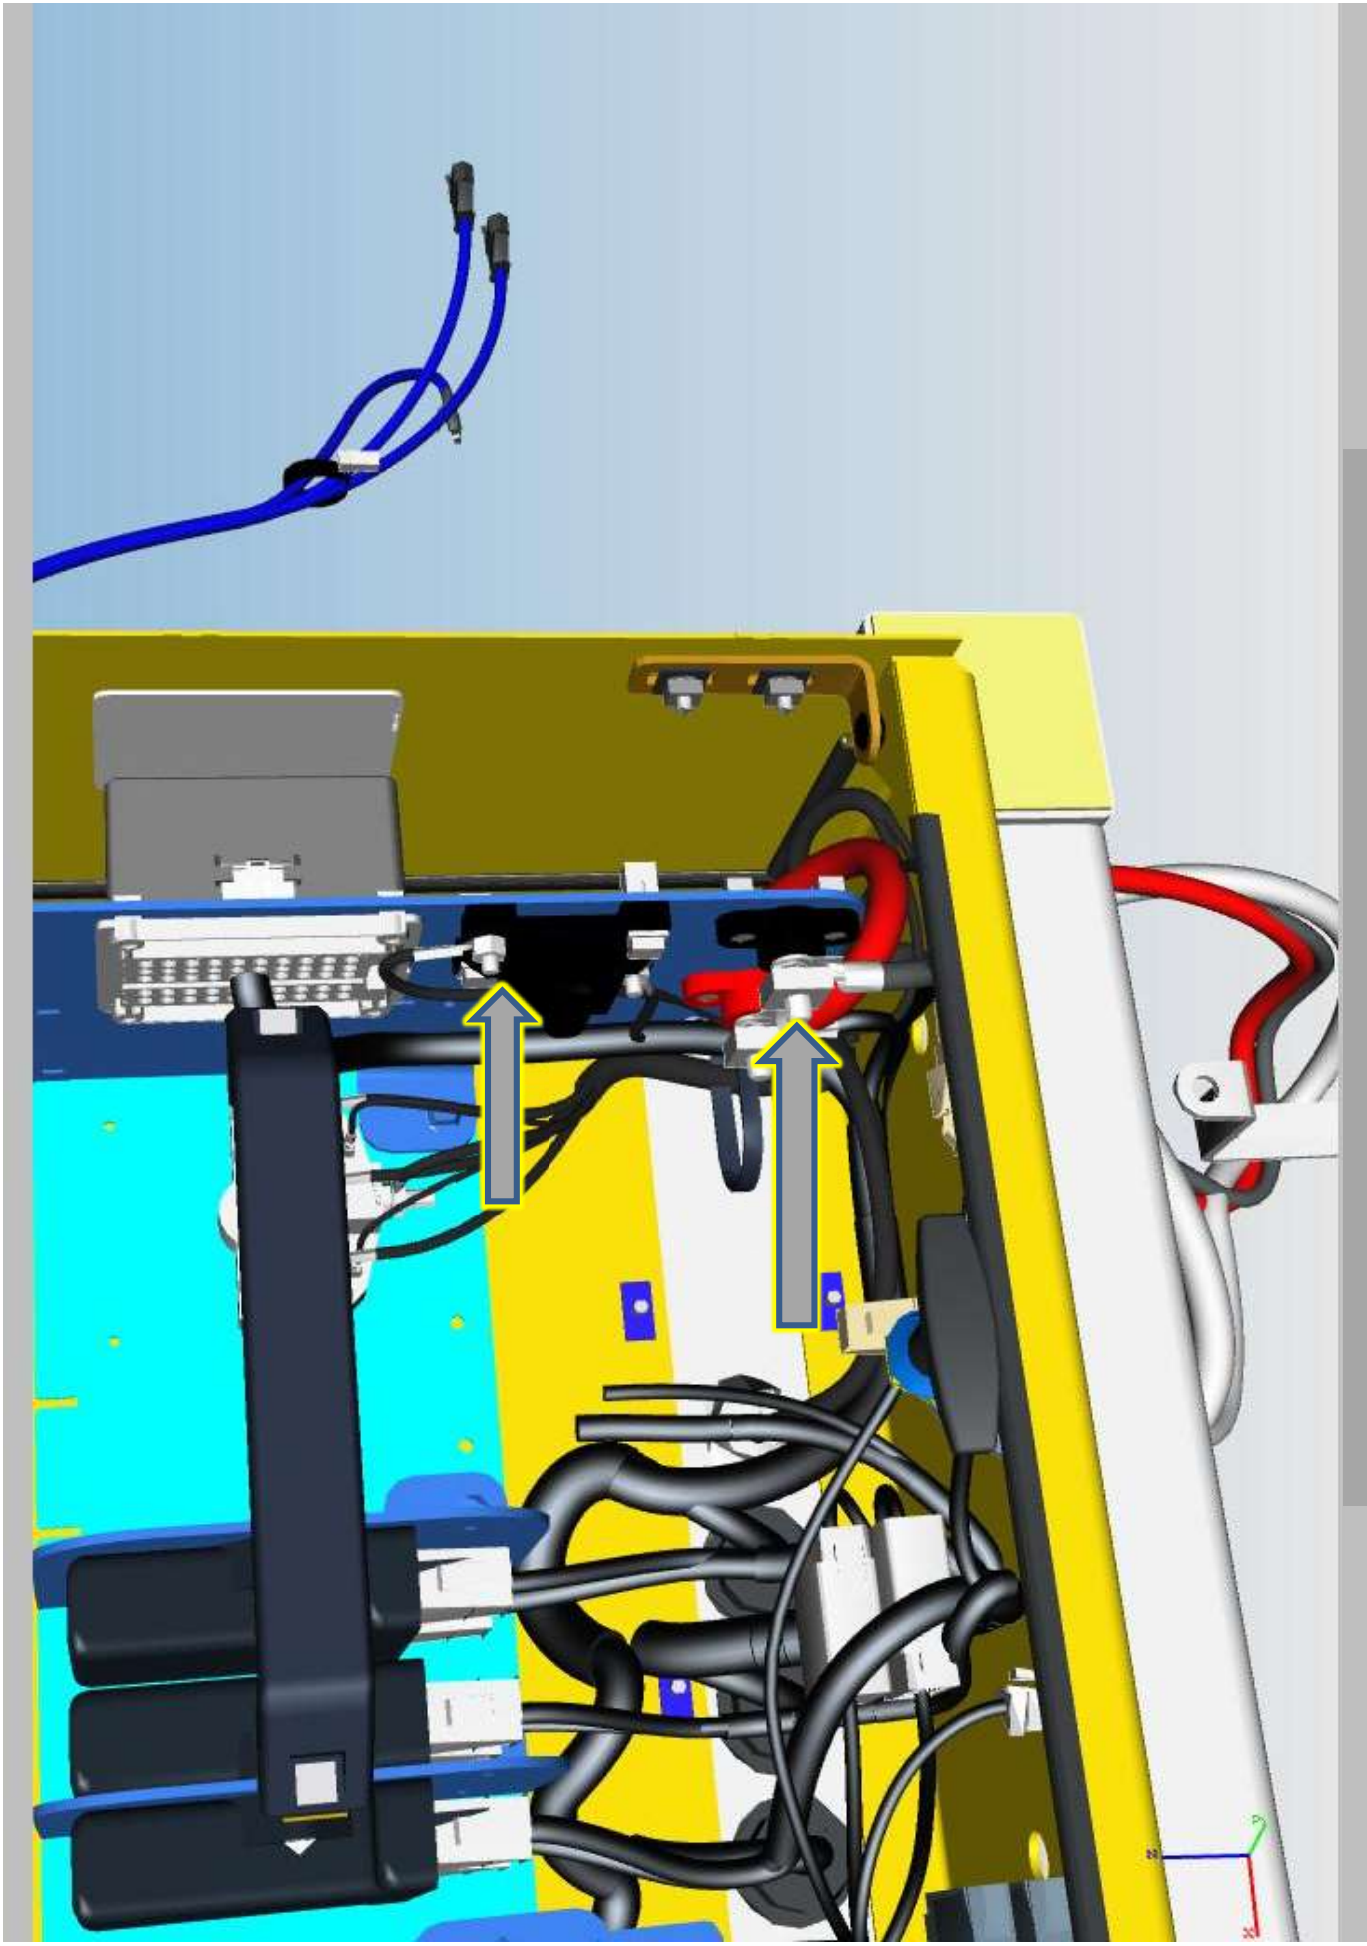

Ground wires inside the electrical boxes for the system.

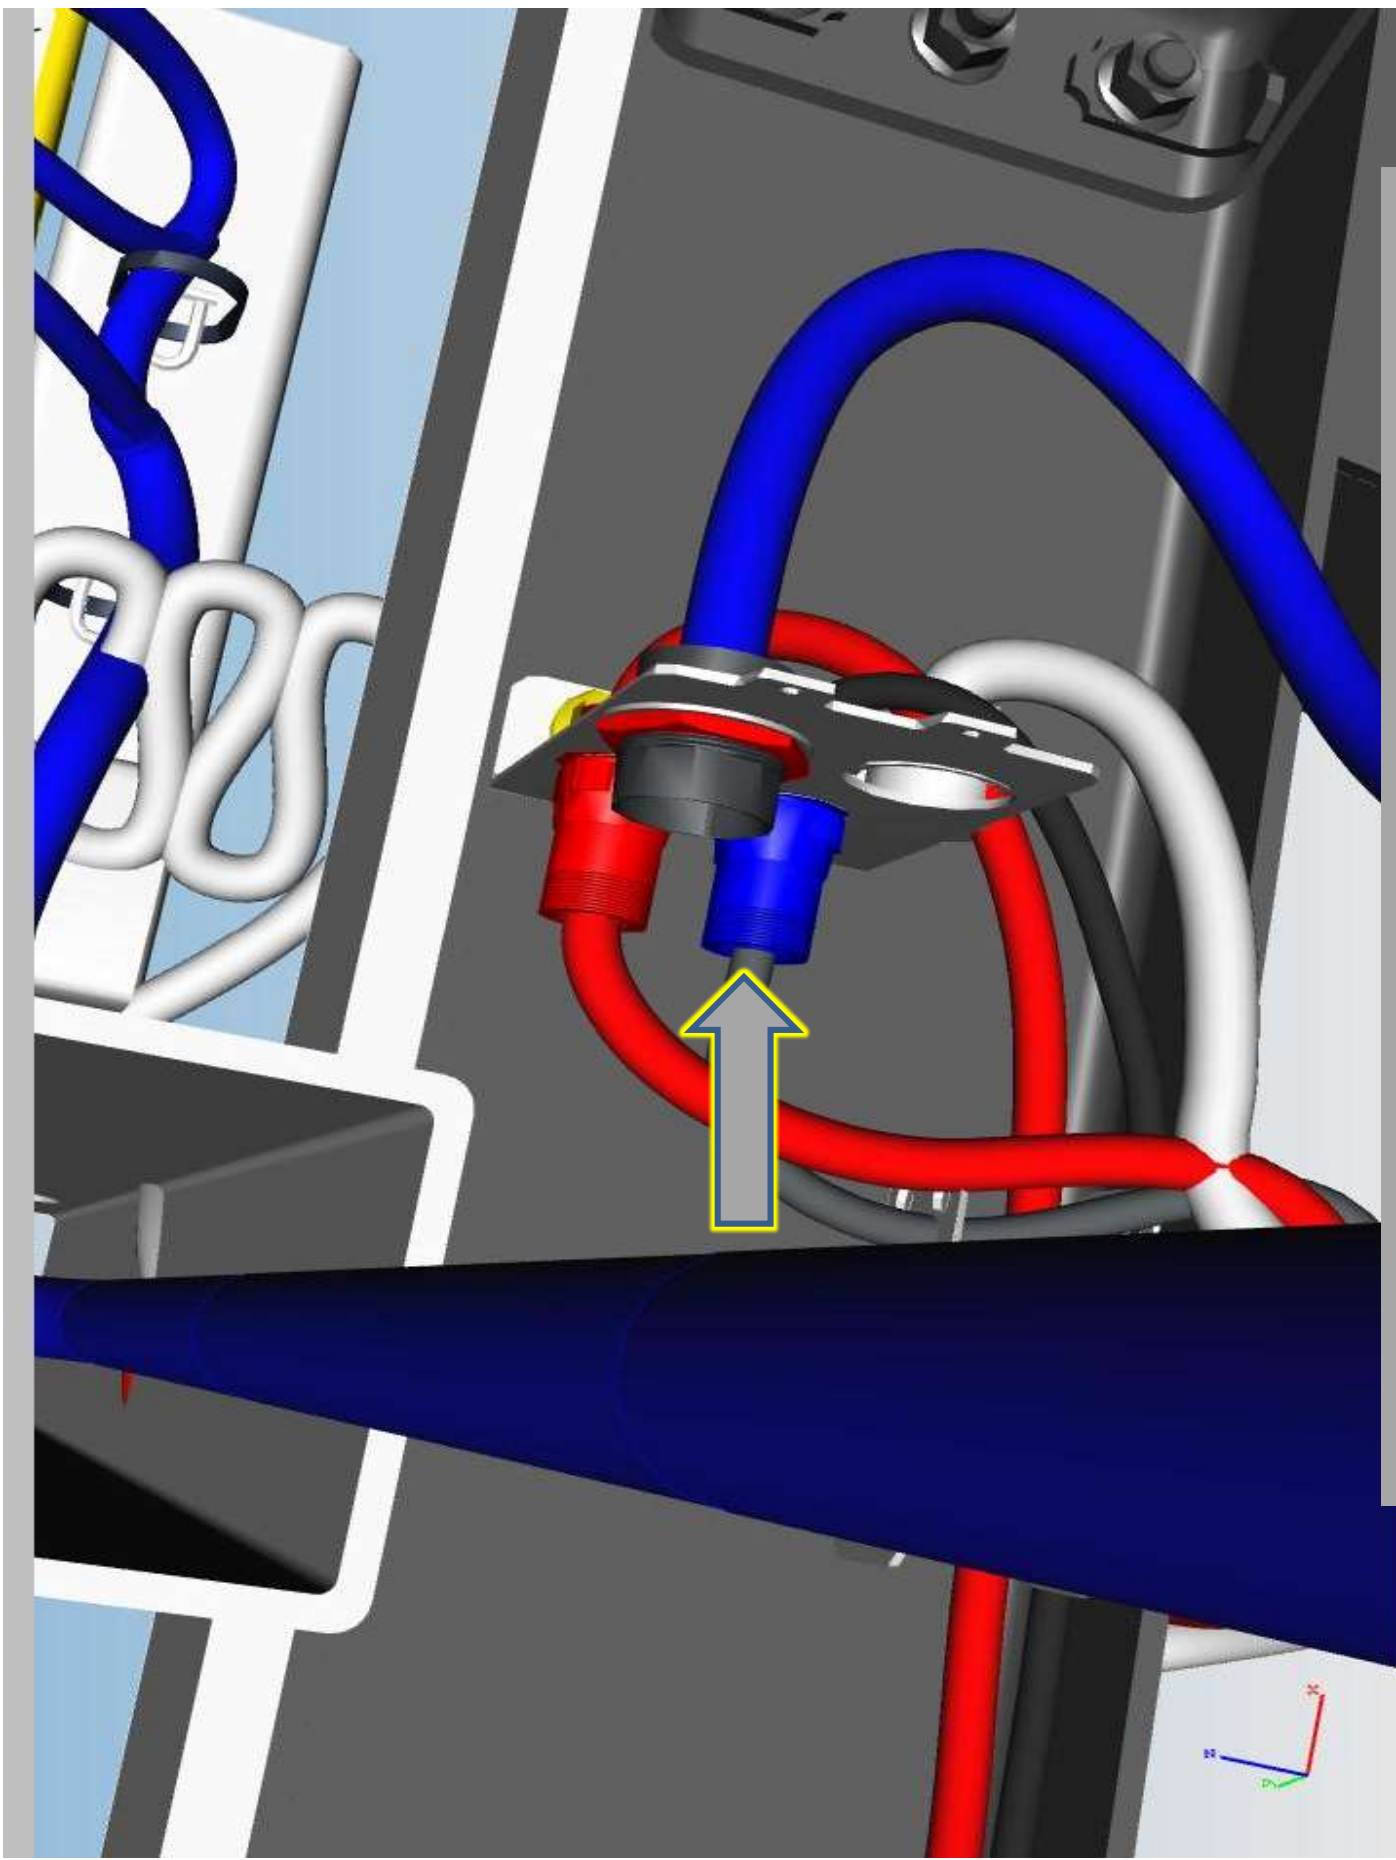

Ground wire on right frame rail for system electrical box.